





STANLEY BOSTITCH

Model P6C Series Plier

CAUTION: Read instructions carefully before operating plier, and save them for future reference.

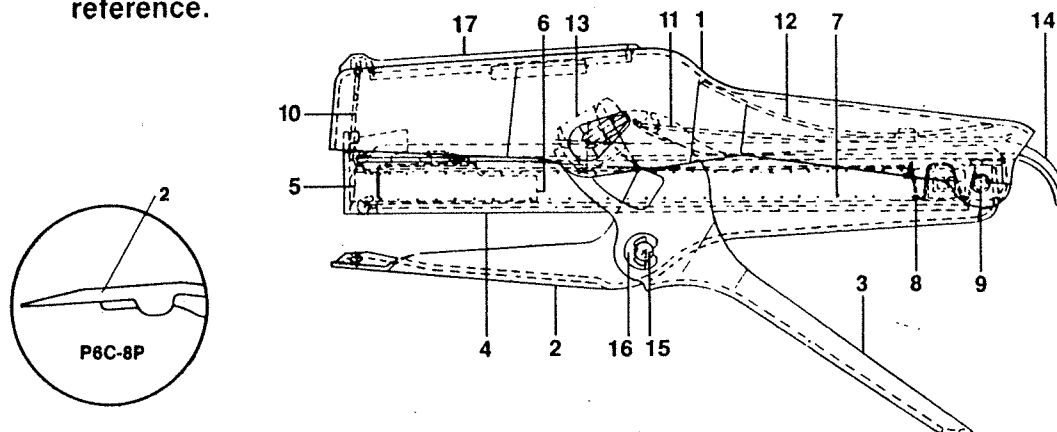

| Item No. | Description | Part No. | Item No. | Description | Part No. |
|----------|---------------------|----------|----------|---------------------|----------|
| 1 | DRIVER ARM | 100392 | 9 | PIVOT PIN | 100401 |
| 2 | CLINCHER ARM P6C | 100393 | 10 | DRIVER P6C-8 | 100402 |
| 2 | CLINCHER ARM P6C-8P | 100396 | 10 | DRIVER P6C-6 | 100403 |
| 3 | OPERATING LEVER | 100394 | 11 | CLINCHER ARM SPRING | 100404 |
| 4 | MAGAZINE P6C-8 | 100537 | 12 | MAGAZINE SPRING | 100405 |
| 4 | MAGAZINE P6C-6 | 100540 | 13 | DRIVE BEARING | 100406 |
| 5 | CORE P6C-8 | 100538 | 14 | MAGAZINE COVER | 100407 |
| 5 | CORE P6C-6 | 100541 | 15 | LEVER PIN | 100408 |
| 6 | PUSHER | 100399 | 16 | E-RING | 85018 |
| 7 | PUSHER SPRING | P627 | 17 | LOADING GUIDE | 100409 |
| 8 | RETAINER | 100400 | | | |

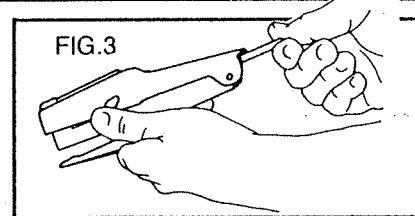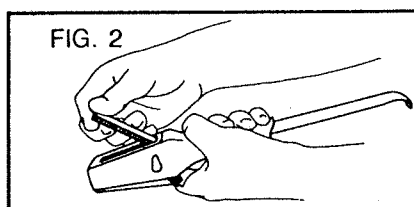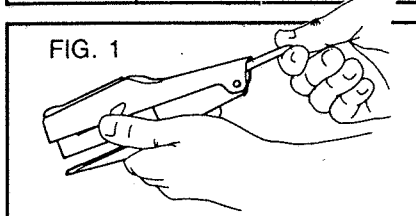

TO LOAD: Pull "up" and out until magazine cover is open as far as it will go. (See FIG. 1). Squeeze plier closed and insert staple stick through loading guide, rear end first, as shown in FIG. 2. Let front end of stick drop in. Be sure it drops in completely. Push magazine cover closed as shown in FIG. 3, until you hear a "click" indicating that it is completely closed.

Staples Required: P6C-8 series use STCR5019 1/4 and 3/8
 P6C-6 series use STCR2619 1/4 and 3/8
 P6C-8P series use STCR5019 1/4 and 3/8

▲ WARNING:

KEEP FINGERS AWAY FROM STAPLE DISCHARGE AREA WHEN OPERATING OR WHEN CLEARING A JAM. NOTE: P6C-8P POINTED BLADE — USE EXTRA CARE WHEN HANDLING.

TO CLEAR A JAM: Grasp plier as if ready to staple. Insert a pencil or similar object between clincher arm and magazine, away from staple discharge area. Operate plier once or twice to expel jammed staples. Do not pry with screwdriver or similar tool as damage to magazine may occur.

TO DISASSEMBLE: (Assembly is reverse) Remove lever pin and operating lever. Remove loading guide by squeezing in on sides. Remove magazine cover by disengaging front from pusher and then pulling it out. Squeeze driver tips together with pliers until disengaged from driver arm. Swing driver arm open. Remove drive bearings. Remove magazine spring from atop clincher arm spring. Disengage front tabs of clincher arm spring from clincher arm and remove clincher arm spring. Push retainer rear leg out from under magazine, and lift out assembly of core, pusher, pusher spring and retainer.

▲ WARNING:

DO NOT DISASSEMBLE CORE-ASSEMBLY, AS COMPRESSED PUSHER SPRING AND RETAINER MAY FLY OFF, CAUSING EYE INJURY.

STANLEY BOSTITCH

Stanley Fastening Systems