



# USA1116

## Air Stapler 140 Series



### OPERATING & MAINTENANCE MANUAL




**WARNING**

BEFORE USING THIS TOOL, STUDY THIS MANUAL TO ENSURE SAFETY WARNING AND INSTRUCTIONS.

KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.

APRIL 2021

# MODEL NO.:USA1116

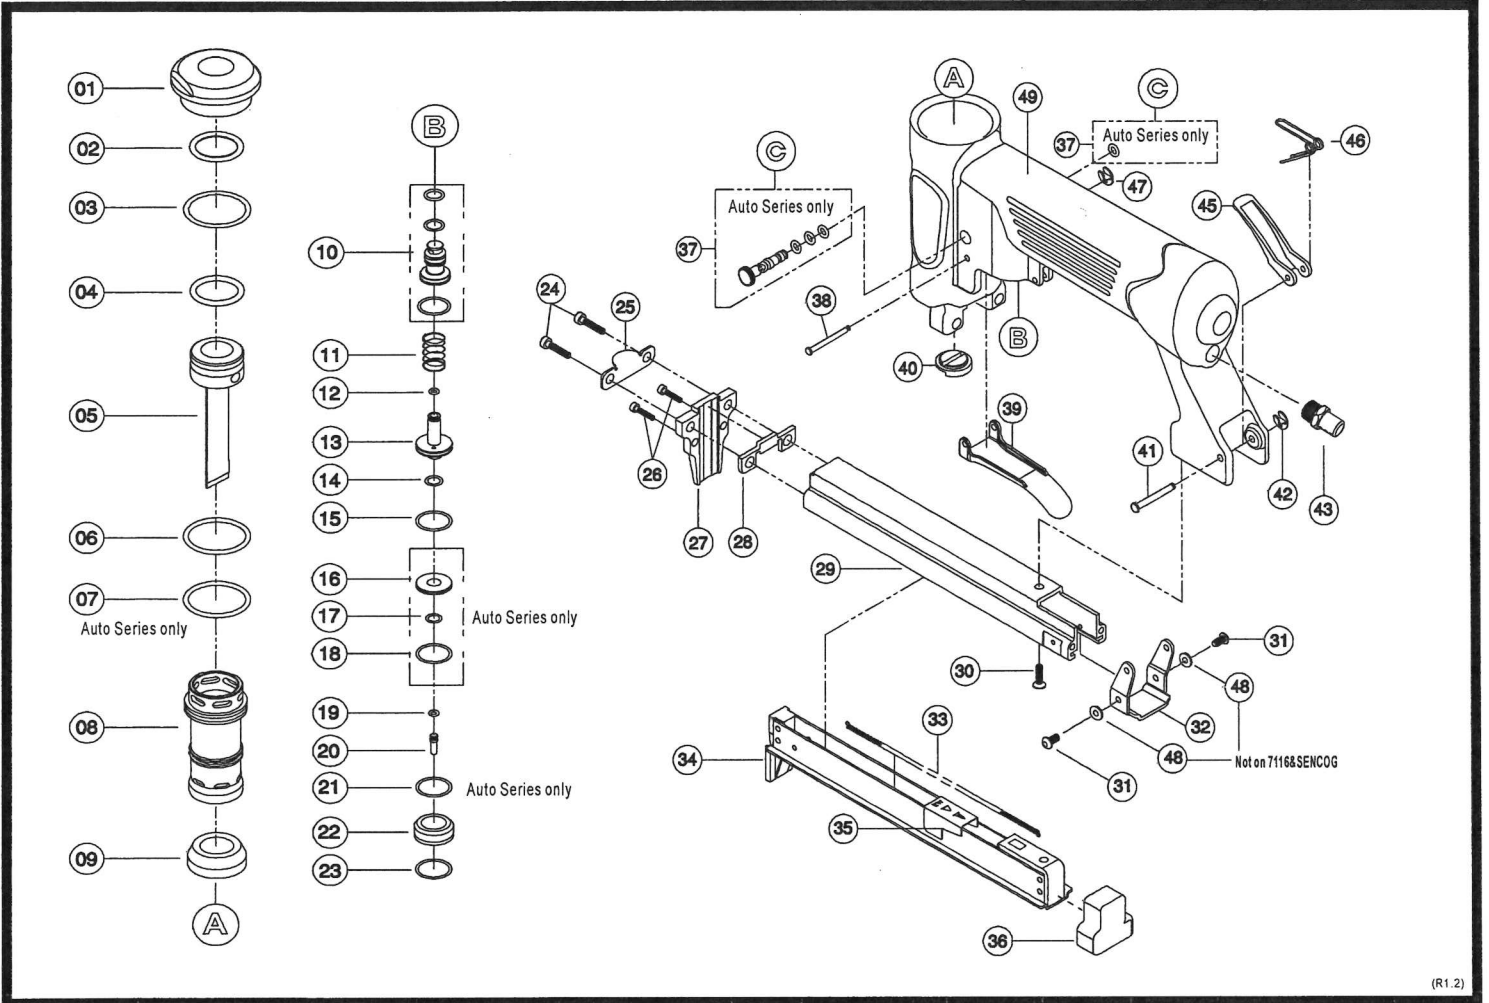

## PARTS LIST MODEL USA1116

No.	Part NO.	Name	PCS	No.	Part NO.	Name	PCS
1	52010	Hammer Cap	1	27	11140	Nose	1
2	90087	O-Ring	1	28	15150	Nose Plate	1
3	90000	O-Ring	1	29	11160	Magazine	1
4	90001	O-Ring	1	30	93001	Screw	1
5	11020	Piston Ram Assembly	1	31	98019	Screw	2
6	90000	O-Ring	1	32	18214	Magazine Retainer	1
8	18030	Cylinder	1	33	18170	Pusher Spring	1
9	18050	Bumper	1	34	11180	Magazine Cover	1
10	18061-1	Trigger Valve Set	1	35	11190	Pusher	1
11	18071	Trigger Valve Spring	1	36	18200	Rear Magazine Bumper	1
12	90055	O-Ring	1	38	52030	Pin	1
13	18080	Trigger Valve	1	39	52040	Trigger	1
14	90005	O-Ring	1	40	18240	Seal	1
15	90007	O-Ring	1	41	20250	Pin	1
19	90009	O-Ring	1	42	95001	E-Ring	1
20	18100	Trigger Valve Stem	1	43	51213	Air Silencer	1
22	18120	Trigger Valve Guide	1	45	18282	Magazine Latch	1
23	90007	O-Ring	1	46	18273	Magazine Latch Spring	1
24	91013-1	Screw + Spring Washer	2	47	95002	E-Ring	1
25	18332	Seal Retainer	1	48	92005	Washer	2
26	91001	Hex.HD Soc Screw	2	49	18570	Gun Body	1