

SIFCO®

PR1650A

16GA. ANGLED BRADDER

OPERATING & MAINTENANCE MANUAL









BEFORE USING THIS TOOL, STUDY THIS MANUAL TO ENSURE SAFETY WARNING AND INSTRUCTIONS.

KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.



WARNING

MAY 2016

      4A1 A15300401A1 CAP ASM.

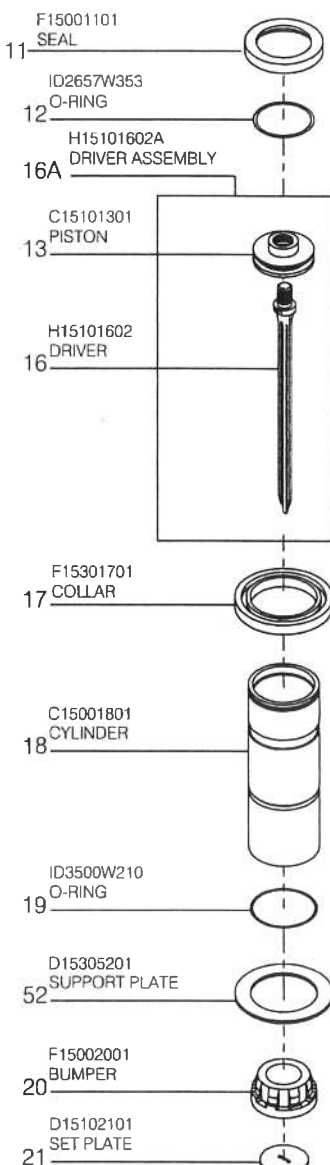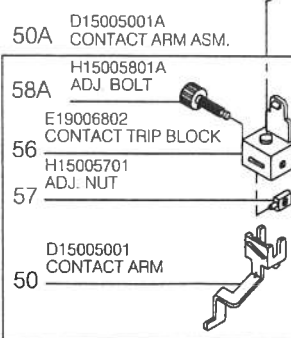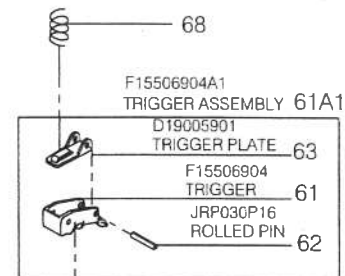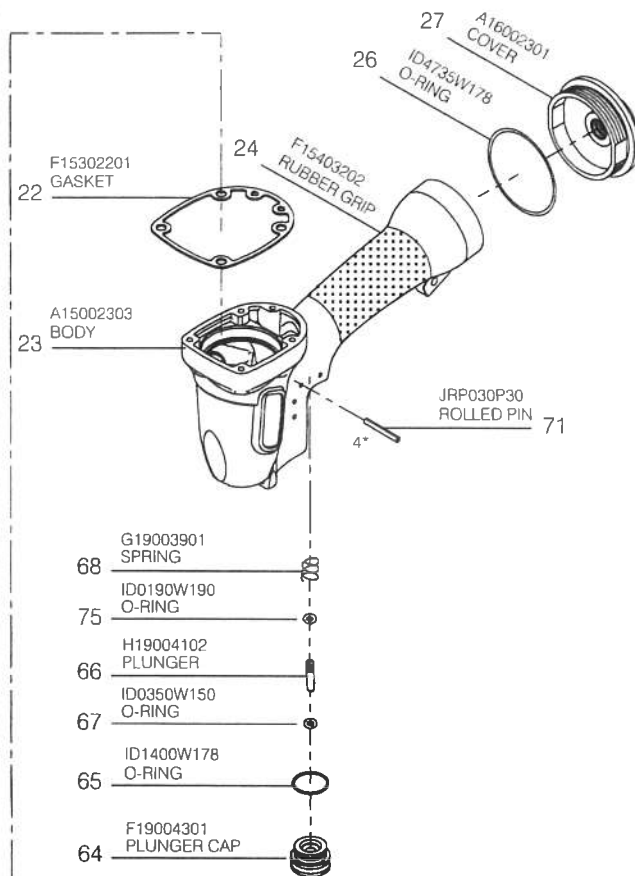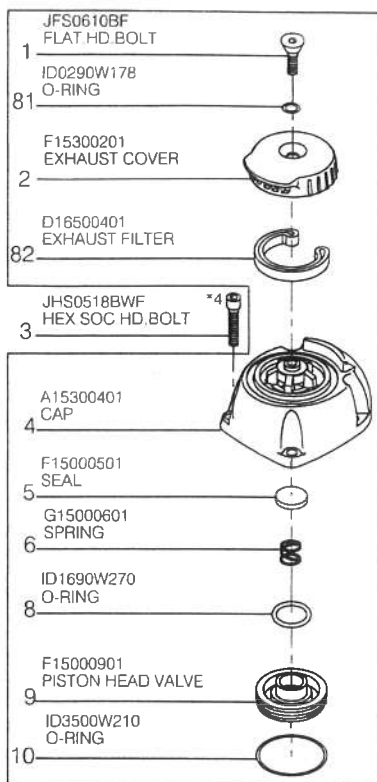

46A1 B15104601A1 MAGAZINE ASM.

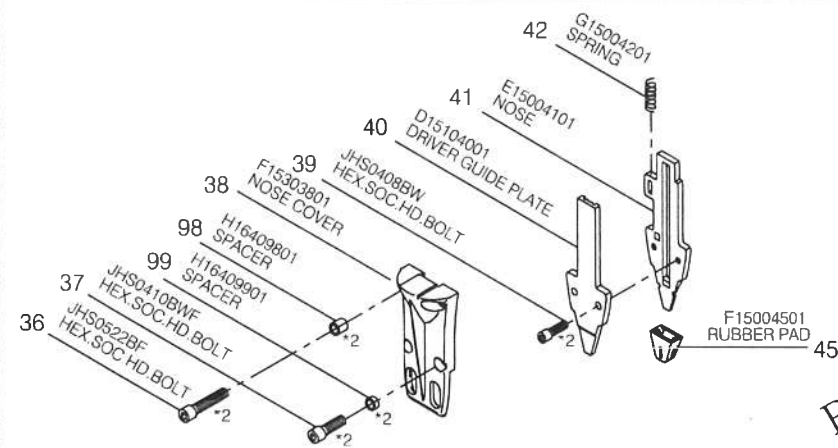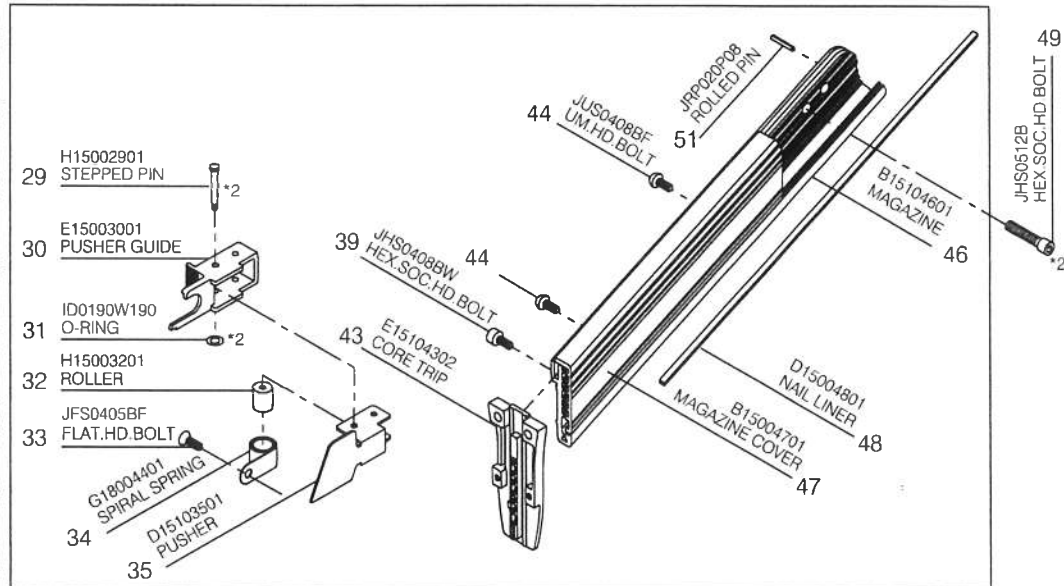  

PR-1650A