


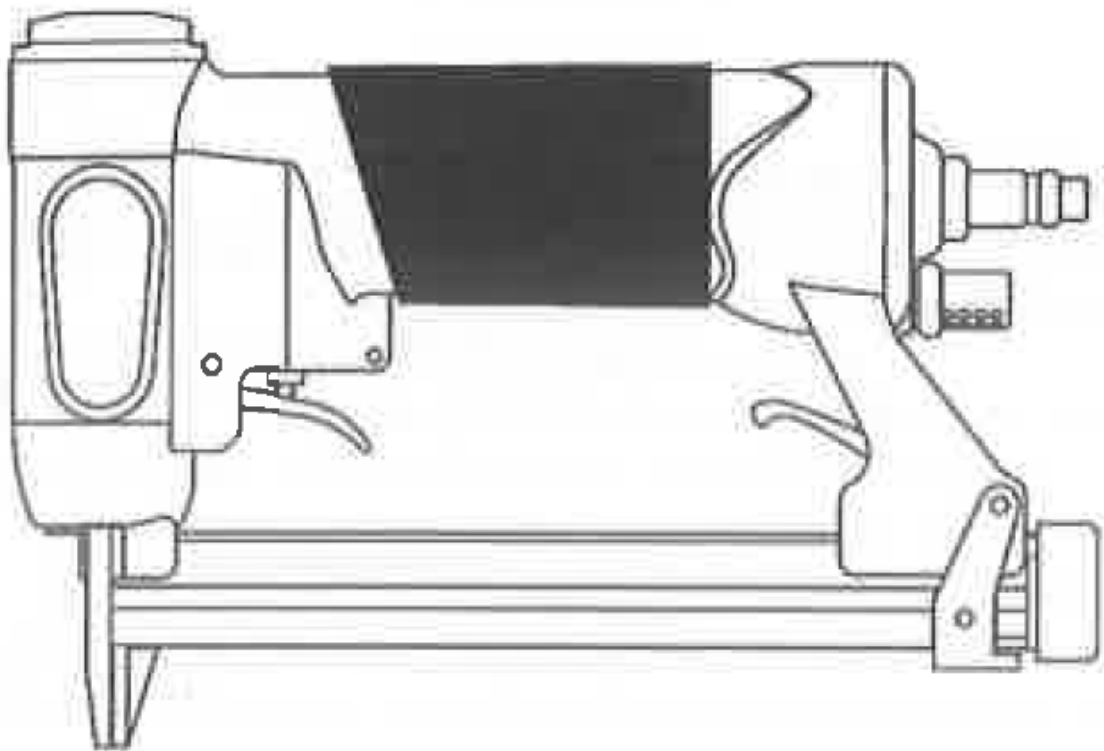

US8016

Upholstery Stapler



OPERATING & MAINTENANCE MANUAL






WARNING

BEFORE USING THIS TOOL, STUDY THIS MANUAL TO ENSURE SAFETY WARNING AND INSTRUCTIONS.

KEEP THESE INSTRUCTIONS WITH THE TOOL FOR FUTURE REFERENCE.

MODEL NO.US8016

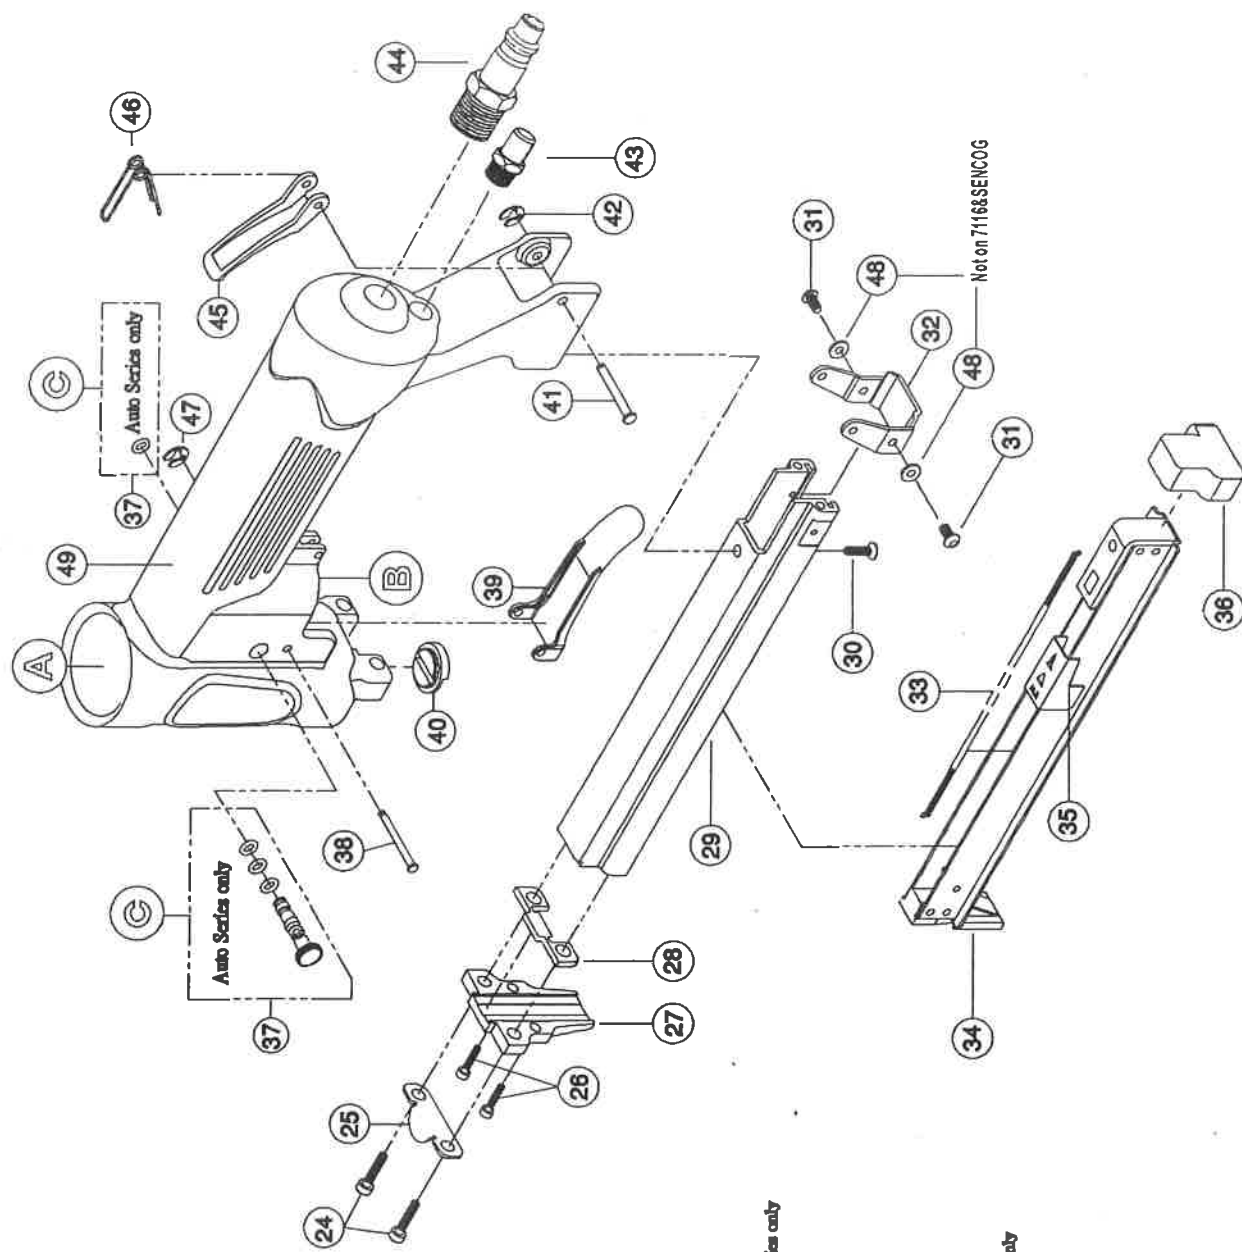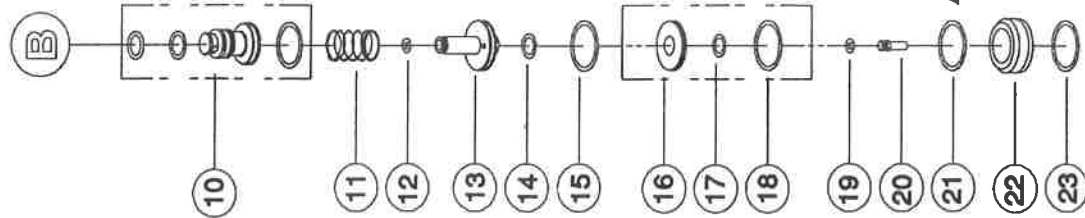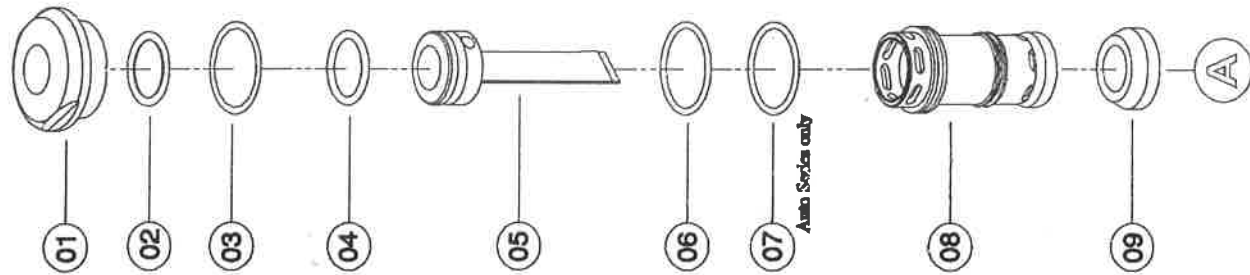

PARTS LIST MODEL US8016

No.	Part NO.	Name	PCS	No.	Part NO.	Name	PCS
1	52010	Hammer Cap	1	28	18150	Nose Plate	1
2	90087	O-Ring	1	29	18160	Magazine	1
3	90000	O-Ring	1	30	93001	Hex. Soc. FT HD Screw	1
4	90001	O-Ring	1	31	98019	Hex. Soc. FT HD Screw	2
5	18020	Piston Ram Assembly	1	32	18214	Magazine Retainer	1
6	90000	O-Ring	1	33	18170	Pusher Spring	1
8	18030	Cylinder	1	34	18180	Magazine Cover	1
9	18050	Bumper	1	35	52060	Pusher	1
10	18060-1	Trigger Valve Set	1	36	18200	Rear Magazine Bumper	1
11	18071	Trigger Valve Spring	1	38	52030	Pin	1
12	90055	O-Ring	1	39	52040	Trigger	1
13	18080	Trigger Valve	1	40	18240	Seal	1
14	90005	O-Ring	1	41	20250	Pin	1
15	90007	O-Ring	1	42	95001	E-Ring	1
19	90009	O-Ring	1	43	51213	Air Silencer	1
20	18100	Trigger Valve Stem	1	44	94001-1	Air Plug	1
22	18120	Trigger Valve Guide	1	45	18282	Magazine Latch	1
23	90007	O-Ring	1	46	18273	Magazine Latch Spring	1
24	91013-1	Hex.HD Soc Screw + Spring Washer	2	47	95002	E-Ring	1
25	18332	Seal Retainer	1	48	92005	Washer	2
26	91001	Hex.HD Soc Screw	2	49	18570	Gun Body	1
27	18140	Nose	1				